

# INSTRUCTIONS:

## Total Chlorine/Copper/Nitrate/Nitrite

Labeled (TCL/CO/NA/NI)  
(4 pads on strip)

1. Rinse out test vial and fill to 1/4" from top with water.
2. Remove test strip from foil packet labeled CL/CO/NA/NI.  
Dip in water, swirl strip **3 times** and remove. **DO NOT** shake off excess water.  
Hold strip level for **2 seconds**.
3. **IMMEDIATELY** read Chlorine pad by comparing to chart below. Next, read the copper test and after a total of 45 seconds has elapsed from when the test strip was first dipped, read the Nitrate/Nitrite Test.



Test Vial



### Total Chlorine



### Nitrate Nitrogen

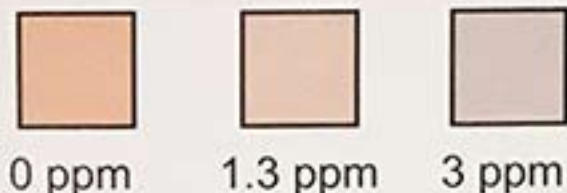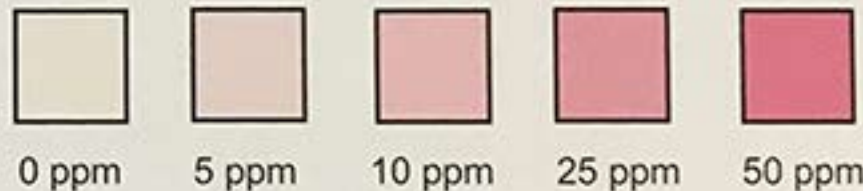

### Copper



### Nitrite Nitrogen

Made in USA