

Instructions:

1. Rinse out test vial and fill to 1/4" from top with water.
2. Remove test strip from packet marked ALK/pH/Hard. Pick up strip on end with no pads.
3. Dip the ALK/pH/HARD strip in water for one second and remove.
4. Hold test strip level and wait ten (10) seconds. Compare to color chart below in order starting with alkalinity, then pH and hardness.


Alkalinity/pH/Hardness

Labeled (Alk/pH/Hard)
3 pads on test strip

Made in USA



Alkalinity

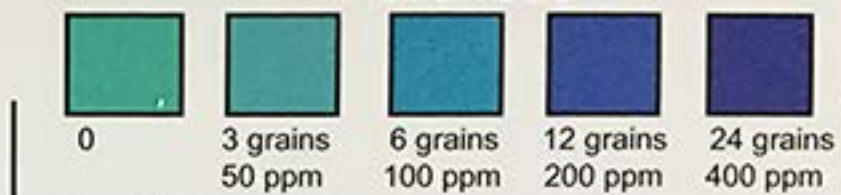

Hardness



pH




Iron Test

PERFORM IRON TEST LAST

Instructions: Iron Test (labeled Iron) 1 test pad on strip

- 1) Rinse out test vial and fill to 1/4" from top with water.
- 2) Remove 1 iron reagent tablet (**Do Not Eat**) from foil packet and place in test vial.
- 3) Place cap on test vial and shake until tablet completely disintegrates then remove cap from test vial.
- 4) Remove (1) iron test strip from foil package. Do Not Touch Pad
- 5) Immerse test pad in sample for 2 seconds.
- 6) Remove test strip from sample with pad face up.
- 7) **SHAKE ONCE TO REMOVE EXCESS WATER.**
- 8) Wait 60 seconds and compare to color chart. Record results.

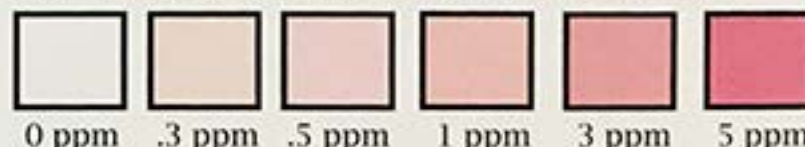

Test Pad
Do Not Touch

Test Vial



**Iron Reagent Tablet
CONTAINS SULFITE
"DO NOT EAT"**

B2017